

Accent Table Runner

Item # 103001 103002 103003 103004 103010
103013 103014 103015 103016 103022

Congratulations on the purchase of your Accent Table Runner.

Owner's Manual

Includes:
Parts List
Assembly Instructions
Disassembly Instructions
Storage Instructions
Care Instructions
Warranty Information




Please read all of the information carefully and contact your distributor or supplier with any issues.

Parts List

Important: Before you begin please count and inspect all pieces.

1 - Accent Table Runner

Assembly Instructions

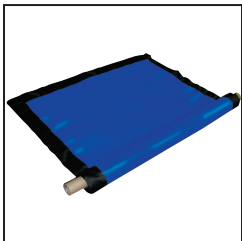


Step 1
Unroll table runner from packing tube, on table.



Step 2
Place table runner over table. Center table runner on table.

Disassembly Instructions

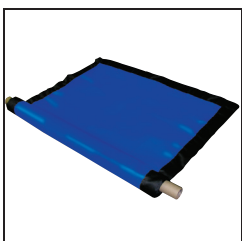

Step 1
Remove table runner from table. Lay flat and roll the table runner onto the packing tube that it shipped with. When completely rolled, pack in a soft case (sold separately).

Storage Instructions



Store in a cool, dry place preferably in a soft carry case or poly bag.

Care Instructions

Recommended for indoor use only.

Machine wash on gentle cycle using mild detergent. Do Not dry clean.

Tumble dry on low heat setting only. Do Not iron.

Warranty Information

All products are designed to provide the user with a cost-effective and durable product. Standard warranty is a 'one year parts and labor' warranty which warrants product against defects in material and workmanship. It does not cover damage due to accidents, abuse, or normal wear and tear. Products found to be defective will be replaced or repaired at factory's discretion.

PMS colors are reference only. Slight shifts in color may occur due to dye lot variations.